
SHS and LHS Hanging / Crane Scales

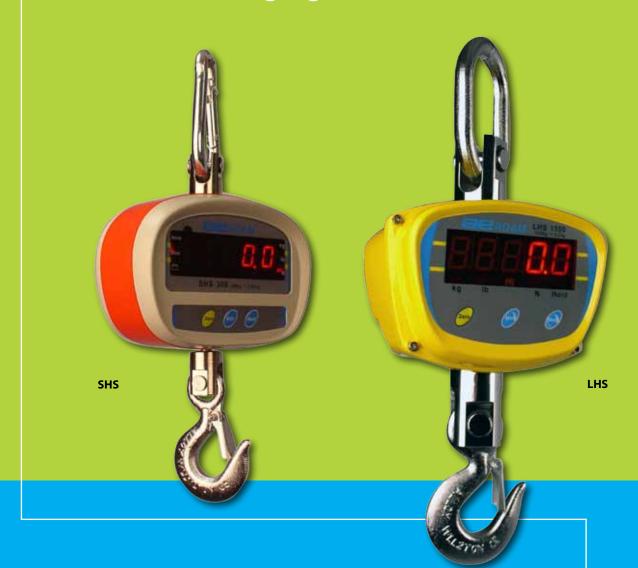

Solid performance is the foundation of Adam Equipment's SHS and LHS hanging scales. These flexible crane scales make it easy to measure suspended loads.

Designed with safety in mind, each scale features a standard remote control that allows operation at a safe distance. The rotating hook with safety catch ensures stability and keeps the suspended item securely in place. High-contrast red LED display and indicators are easy to read in any lighting conditions. A handy hold function keeps the reading visible on the display after the weight is removed, allowing the operator to safely record the weight.

Each model offers a built-in rechargeable battery, which allows the scale to be used in areas where power is not available.

Adam Equipment has been a world-class scale and balance manufacturer for more than 40 years. Trust Adam to bring you quality products with a wide range of features to handle a variety of applications.















SHS and **LHS** Highlights:

Clear Readout

The bright LED display can be viewed readily in any lighting conditions, including outdoors. The large digits are easy to see and indicators show unit of weight selected, low battery and hold function.

Display Hold

With the display hold function, the user can set the indicator to automatically store and fix the weight reading, allowing better and safer management of the weighing process.

Simple, Flexible Operation


Use the included remote control or the colour-coded keypad to safely operate the scale's functions. The bright-yellow tare/zero key is easy to spot for quick recognition.

Adaptable Weighing


The display unit rotates 360 degrees, providing an optimal viewing angle for the operator.

Features

- Three-button infrared remote control
- Colour-coded keypad
- Three weighing units (kg, lb, Newtons)
- · Display hold function
- 360-degree rotating display
- 360-degree swivel shackle and bolt
- External calibration
- Polycarbonate indicator housing (SHS only)
- Cast aluminum magnesium indicator housing (LHS only)
- · Chrome-plated steel hook with safety catch
- Automatic power-off
- Low-battery indicator
- Rechargeable battery

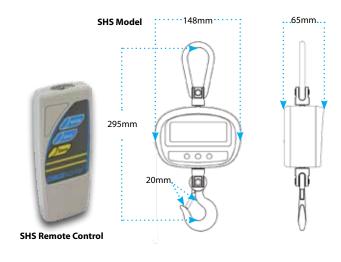





Technical Specifications

Model	SHS 50	SHS 150	SHS 300	LHS 500	LHS 1500	LHS 2000
Capacity	50kg	150kg	300kg	500kg	1500kg	2000kg
Readability	0.01kg	0.02kg	0.05kg	0.1kg	0.2kg	0.5kg
Repeatability (S.D.)	0.01kg	0.02kg	0.05kg	0.1kg	0.2kg	0.5kg
Linearity (+/-)	0.02kg	0.04kg	0.1kg	0.2kg	0.4kg	1kg
Weighing Units	kg, lb, N					
Stabilisation Time	1-2 seconds when weight is stable on hook					
Calibration	External					
Display	Red LED 15mm-high digits x 5			Red LED 25mm-high digits x 5		
Power Supply	Rechargeable lithium battery or AA batteries can be used in place of the lithium battery (up to 20 hours per charge)			Mains power supply or internal rechargeable battery (up to 30 hours per charge)		
Operating Temperature	15° to 35℃			-10° to 40°C		
Construction	Polycarbonate housing			Cast aluminum magnesium alloy housing		
Overall Dimensions (wxdxh)	148 x 65 x 320mm, including hook and shackle			195 x 130 x 450mm, including hook and shackle		
Net Weight	1.2kg			4.8kg		

