



ES Series

Low Profile Bench Scales

Utility and economy come together in the ES Series of all purpose bench scales. The low profile design of the ES Series Scales makes them perfect for goods despatch, receiving, and general bench applications. Easy, two-button operation and a large display guarantee accurate and unmistakable results. The unique 3-way mounting bracket allows you to mount the indicator to the scale base, above the scale platform, or on any vertical surface. For simple weighing at a favourable cost, an ES Scale is the one to choose.

- 6 Models to choose from – 6 kg to 200 kg
- Features kg, lb, oz and lb:oz units
- Plug and Weigh – Ready to use
- AC and battery power

ES Series Low Profile Bench Scales

Specifications

Capacity (kg)	6	30	50	50	100	200
Readability (kg)	0.002	0.01	0.02	0.02	0.05	0.1
Weighing Units	kg, lb, oz, lb:oz					kg, lb, oz
Base Size (cm)	31 x 27 x 4			52 x 40 x 7.5		
Indicator Stand (cm)	10			10		
Platform Construction	Stainless steel/baked enamel frame			Stainless steel/powder coated frame		
Scale Weight (kg)	3			15		
Shipping Weight (kg)	4			17		
Shipping Dimensions (cm)	32 x 37 x 14			48 x 60 x 23		
Span Calibration	100%			50%		
Display (cm)	LCD 2.54 cm (digit height)					
Keyboard	Two function membrane switches					
Power	9VDC / AC adapter (included) or six AA batteries (not included)					
Typical battery life	120 hours/30 hours of continuous use					
Stabilization Time (typical)	Within 3 seconds					
Storage Temperature	-10 °C to 70 °C					
Operating Temperature	-10 °C to 40 °C					
Model	ES6R	ES30R	ES50R	ES50L	ES100L	ES200L


Meets Requirements of Approval Agencies: UL, FCC, CSA, CE Safety EN60950, Emissions EN55022, Immunity EN50082-1

Standard Features

Easy two-button operation, Stability indicator, Auto-zero tracking,
Battery saving auto-off timer, (after 5 minutes of inactivity),
3-way mounting bracket, (mounts indicator to base, above base, or to wall),
Large platforms feature leveling feet. AC Adapter.

Simple To Order

Contact your dealer for product availability as well as warranty information.
ES models are serviceable, replaceable spare parts are available.

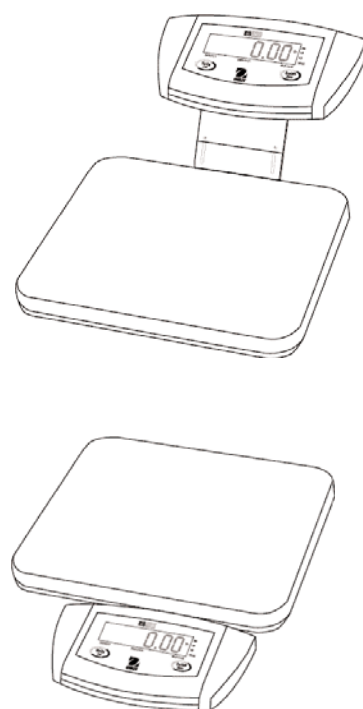

Ohaus UK Ltd.
64 Boston Road
Beaumont Leys
Leicester LE4 1AW
ENGLAND
Tel.: +44 116 234 5075
Fax: +44 116 234 6706
e-mail: uksales@ohaus.com

Ohaus Europe GmbH
Im Langacher
CH-8606 Greifensee
Switzerland
Tel.: +41-1-944 33 66
Fax: +41-1-944 32 30
e-mail: EuropeSales@Ohaus.com

With offices in Mexico, Switzerland,
England, Germany, France, Spain, Italy,
Poland, Russia, Japan, Korea and China

* ISO 9001
Registered Quality Management System

www.ohaus.com

© OHAUS Europe 80774100

