
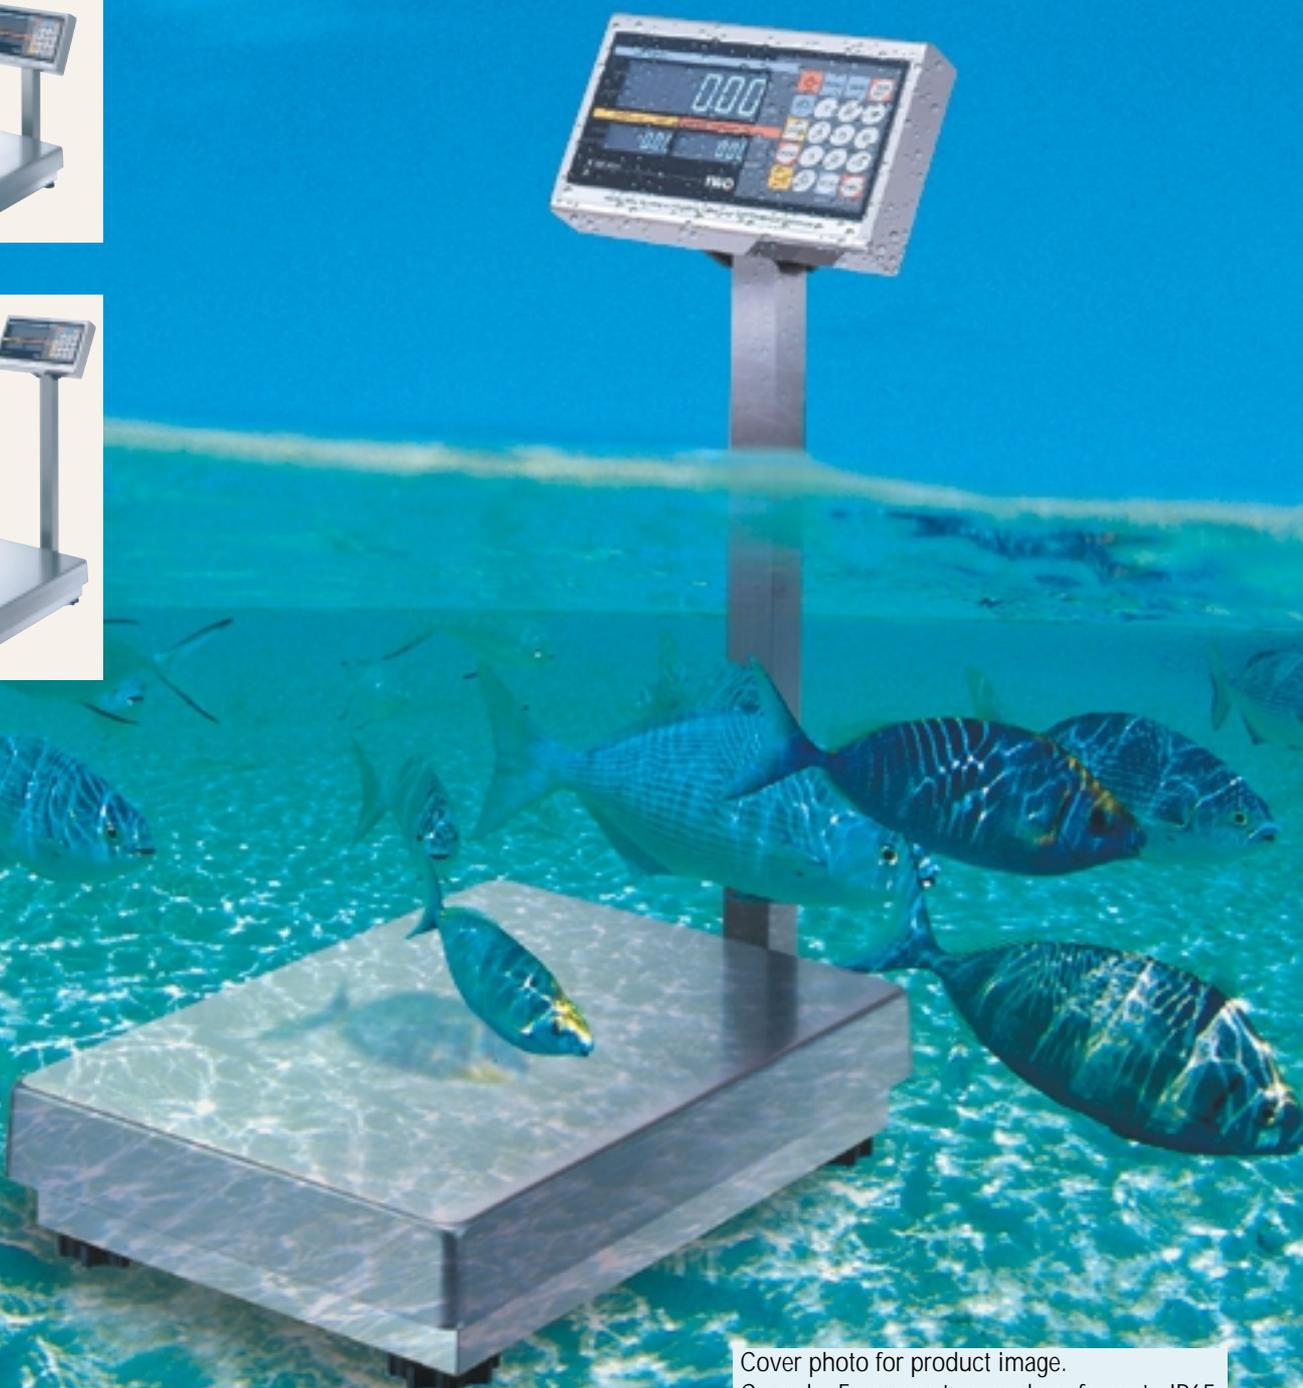


IWQ Series

Conforms to IP67, Water-resistant / Stainless Steel Scale

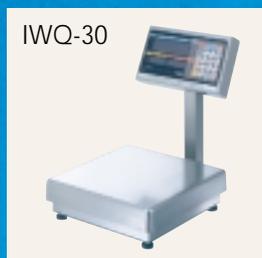

Cover photo for product image.
Console: European type and conforms to IP65.

Ideal for meat and seafood industries

– reliable water-resistant scale even under harsh conditions

- **Water-resistant Scale Made Completely of Stainless Steel, Conforming to IP-67** (Console: IP-65)

Allows washing and water splashing, which realizes easy cleaning and outstanding durability. For the first time in the industry the load cell has been coated with acrylic resin to make it completely waterproof.



- **Autorangeing Feature**

Weighing range changes depending on product weight. No need to use several scales for different weighing capacities.

- **Checkweighing Function for Quality Control**

Upper and lower weight limits can be set to check if the product weight is within the specified range. Suitable for controlling the filling quantity of packed food, etc.


* An optional relay allows for interlock with a display lamp or sequencer.

- **Large, Bright Display**

A large fluorescent display provides superior visibility.



European design

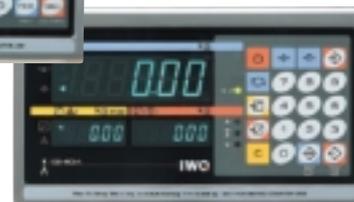


- **Counting Function**

The numeric keypad allows easy operation in counting mode. Single weight and total weight can be displayed at the same time.

- **Relay Output (Option)**

Linking a lamp or sequencer is also possible by the relay output.

■ Dimensions unit: mm (inch)

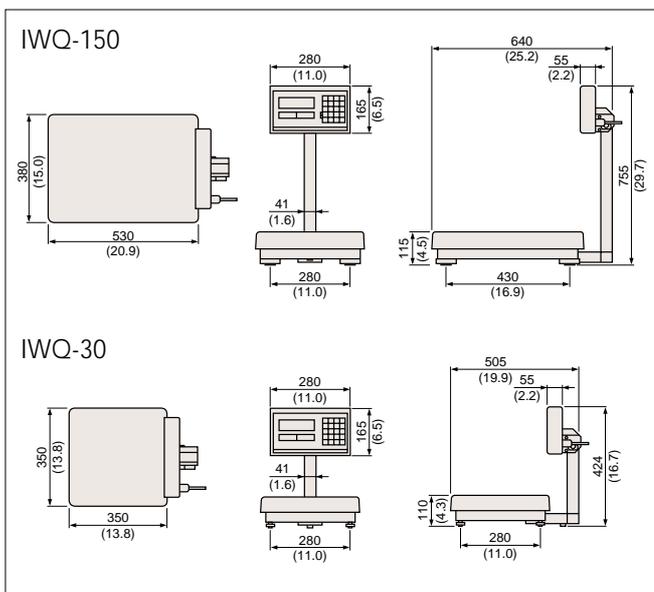

* Longer pole available

■ Specifications

Models	IWQ-150	IWQ-30
Capacity/ Minimum Graduation	150 kg/50 g 60 kg/20 g (dual)	30 kg/10 g 15 kg/5 g (dual)
Display	Fluorescent	
Weight Check	over, accept, under	
Display Items	Upper/lower limit & tare presetting (5 digits each)	
Weight	18 kg	10 kg
Waterproof Construction	IP-67 (Console: IP-65)	
Power Supply	AC100V 240V +/-10%, 50/60Hz	
Option	Output via RS232C	

Ishida, the world leader in weighing technologies, manufactures a full line of retail scales.



Scale Printer
"ASTRA"

Design and specifications are subject to change without notice.



ISHIDA CO., LTD.

44 SANNO-CHO, SHOGOIN, SAKYO-KU
 KYOTO, 606-8392 JAPAN
 PHONE : 81-75-771-4141
 FACSIMILE: 81-75-751-1634
 URL: <http://www.ishida.co.jp>