



KELBA KLP-G-3000-1200 Galvanised Platform Scale

Kelba's KLP-G-3000-1200 x 1200mm NMI (Trade Approved) platform scale provides low cost fast accurate weighing of bulk goods. Built in Australia the KLP-G-3000-1200 is built using a simple multiple cross bracing using 8 x 10mm x 60mm flat bar construction, eliminates any deflection. This also allows for odd size custom scales to be made simply and at a cost effective price. It's clean under plate design eliminates product entrapment. Easy electronic corner adjustment can be done via accessing the stainless steel junction box via access hatch in the top deck.

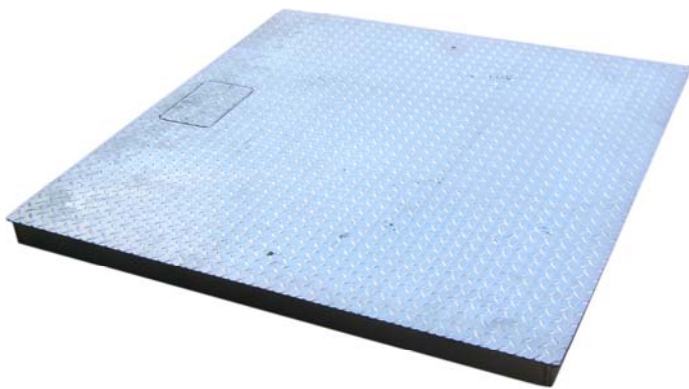

KLP-G-3000-1200 Platform Scale

Ball & Cup Feet

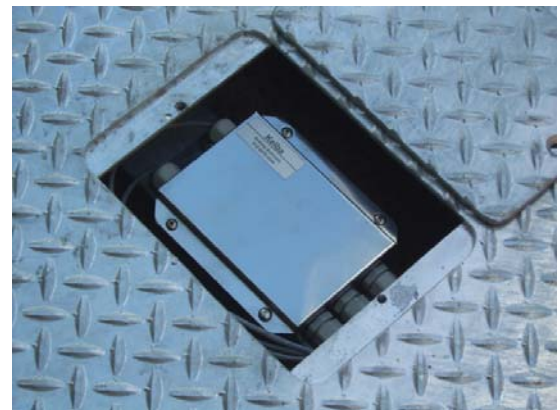

Underneath Flat Bar Construction

KLP-G-3000-1200 series stainless junction box
access

7 Leonard Street, Hornsby NSW 2077 Australia-P.O. Box 1664, Hornsby Westfield NSW 1635
Tel: (02) 9476 4544 • Fax: (02) 9477 7974 • Int'l +61-2 • E-mail: kelba@kelba.com • Web Site: www.kelba.com

Features

✚ Australian Made	✚ Adjustable Ball & Cup Feet
✚ Galvanised Finish	✚ Stainless Steel Junction box
✚ NMI approved	✚ Kelba KH8C31000 - IP67 load cells
✚ Low Cost	✚ Level bubble equipped
✚ Flat Bar Construction	✚ Custom odd sizes available up

Specifications

Model	Capacity	Gradations	Platform Size	Finish	Shipping Weight
KLP-G-3000-1200	1500kg 3000kg	0.5kg 1kg	1200mm x 1200mm	Galvanised	130kg
Junction box access:		Via side drawer			
Operating Temperature:		-20 °C to + 60°C platform scale only			
Storage Temperature:		0°C to 50°C			
Operating Humidity:		85%R.H			
Display Reading:		Indicator dependant			
Platform Scale NMI Approval:		6/9C/304			
Loadcell NMI Approval:		S471			
Feet:		Ball & cup feet adjustable			
Junction box:		Stainless Steel			
Warranty:		1 Year excluding loadcells which are 3 years.			

Specialist manufactures and suppliers of Load cells, Industrial weighing equipment and Accessories